



CLINICAL CENTRIFUGE

USER MANUAL

sales@labcoscientific.com.au labcoscientific.com.au 1800 052 226 PO Box 5816, Brendale, QLD 4500 ABN 57 622 896 593 Version 1.1



CONTENTS	PAGE NUMBER
INTRODUCTION	2
WARRANTY	2
DELIVERY	2
SAFETY INSTRUCTIONS	3
1. SPECIFICATIONS	6
2. DECLARATION OF CONFORMITY	7
3. INSTALLATION	8
4. STRUCTURE	9
5. OPERATION	12
6. MAINTENANCE	15
7. TROUBLESHOOTING	16
8. INSTRUCTIONS FOR THE ROTOR AND TUBES	17
9. CALCULATE RCF	18
AFTER SALES SERVICE	18



INTRODUCTION

Welcome to the Clinical Centrifuge User Manual. Users should read this manual carefully, follow the instructions and procedures, and beware of all the cautions when using this instrument.

PRODUCT CODE	DESCRIPTION		
400.003.300	Clinical Centrifuge		
ACCESSORIES			
400.003.310	Rotor for 15mL x 8		
400.003.311	Adapter used with 400.003.310 Rotor		
400.003.312	Adapter used with 300.003.311 Adapter		

WARRANTY

Warranty of centrifuge

This centrifuge is guaranteed for 12 months from the date of delivery provided that it has been operated and maintained properly.

Warranty of the rotor

The rotor is guaranteed for 12 months from the date of delivery. Do not use the rotor once it has corrosion or fatigue damage. We do not guarantee this centrifuge and the rotor under the following conditions even if within the warranty period:

- 1. Failures caused by incorrect installation.
- 2. Failures caused by rough or improper handling.
- 3. Failures caused by conveyance or relocation after installation.
- 4. Failures caused by unauthorised disassembly or modification.
- 5. Failures caused by using parts of the other companies, such as rotors and adapters.
- 6. Failures caused by natural disasters including fire, earthquakes and so on.
- 7. Consumables and parts have a limited guarantee period

DELIVERY

This unit is supplied with one centrifuge unit, rotor and user manual.



SAFETY INSTRUCTIONS

Carefully read the following safety precautions for a thorough understanding.

- Follow the instructions and procedures described in this manual to operate this centrifuge safely.
- Carefully read all safety messages in this manual and the safety instructions on the centrifuge.
- Safety messages are labeled as indicated below. They are in combination with signal words of "WARNING" and "CAUTION" with the safety alert symbol *(*) coall your attention to items or operations that could be dangerous to

"CAUTION" with the safety alert symbol 222 call your attention to items or operations that could be dangerous to you or other persons using this centrifuge. The definitions of signal words are as follows:

WARNING : Personal Danger

Warning notes indicate any condition or practice which could result in personal injury or possible death.

CAUTION : Possible damage to centrifuge

Caution notes indicate any condition or practice which could result in damage or destruction of the centrifuge.

NOTE : Notes indicate an area or subject of special merit, emphasizing either the product's capability or common errors in operation or maintenance.

- Do not operate the centrifuge in any manner not described in this User Manual. When in doubt or have any troubles with this centrifuge, ASK FOR HELP.
- The precautions described in this User Manual are carefully developed in an attempt to cover all the possible risks. However, it is also important that you are alert for unexpected incidents.



- This centrifuge is not explosion-proof. Never use explosive or flammable samples.
- Do not install the centrifuge in or near places where inflammable gases are generated or chemicals are stored.
- Do not place dangerous materials within 30cm of the centrifuge.
- Prepare all necessary safety measures before using samples that are toxic, radioactive or contaminated with pathogenic micro-organisms. Use of these is at your own risk.
- If the centrifuge, rotor and accessories that have been contaminated by solutions with toxic, radioactive or pathogenic materials, clean it according to the decontamination procedure as specified.
- To avoid electrical shocks, insure hands are dry before handling the power cord or turning on/off the power switch.
- For safety purposes, do not enter within 30cm around this centrifuge when it is in operation.
- While the rotor is rotating, never release the door lock.
- Unauthorized repairs, disassembly, or modifying the centrifuge except by our service center are strictly prohibited.



- This centrifuge must be located on a firm and level table.
- Make sure the centrifuge is horizontal before running.
- Do not move or relocate the centrifuge when it is running.
- If fluid spills in the rotor chamber, please promptly clean and dry with a dry cloth to avoid sample contamination.
- Ensure to remove any objects and fragments of the tubes dropped inside the rotor chamber before running the centrifuge.
- Cautions with rotor
- 1. Always check for corrosion and damage on the rotor surface before using it. Do not use the rotor if an abnormality is found.
- 2. Do not set the speed beyond the allowable minimum speed of the rotor kits (rotor and adapters). Make sure to run it below the allowable maximum speed.
- 3. Do not exceed the allowable imbalance.
- 4. Use the rotor and tubes within their actual capacities.
- 5. If any abnormal condition occurs during operation, please stop it immediately and contact our service center. Notify the service center if a warning code if displayed.
- Vibrations are likely to damage the centrifuge, contact our service center if abnormality observed.



1. SPECIFICATIONS

SPECIFICATIONS	DESCRIPTION		
MAXIMUM SPEED	4,500rpm (300-4500rpm), increment: 100rpm		
MAXIMUM RCF	2,490×g, increment: 100×g		
ΜΑΧΙΜUΜ CAPACITY	10ml×12, 15ml×8		
TIMER	30seconds -99minutes-HOLD, continuous operation		
NOISE	56dB(A)		
DRIVING MOTOR	Brushless DC motor		
SAFETY DEVICES	Door interlock, Over-speed detector, Automatic internal diagnosis		
POWER REQUIREMENTS	Single-phase, 240V, 50Hz/60Hz, 3A.		
AMBIENT CONDITION			
-SET-UP SITE	Indoor only		
-ALTITUDE	Up to 2000 m above sea level		
-AMBIENT TEMPERATURE	2°C ~ 40°C		
-HUMIDITY	80%		
-EXCESS-VOLTAGE CATEGORY	Ш		
-POLLUTION DEGREE	2		
DEVICE PROTECTION CLASS	1		
EMC			
-EMITTED INTERFERENCE,	EN/IEC 61326-1		
INTERFERENCE IMMUNITY	Class A		
DIMENSIONS (MM)	(L) 280× (W) 364× (H) 266		
WEIGHT	6kg		
ADDITIONAL FEATURES	Speed/RCF switch, Pulse operation, Processing display, Voice reminder		



2. DECLARATION OF CONFORMITY

Construction in accordance with the following safety standards:

EN 61010-1

EN 61010-2-020

EN 61010-2-101

Construction in accordance with the following EMC standards:

EN 61326-1/ FCC Part 15 Subpart B/ IECS 001

EN 61326-2-6:2006

Associated EU guidelines:

EMC directive: 2004/108/EC

LVD directive: 2006/95/EC

IVD directive: 98/79/EC



3. INSTALLATION

This section describes the instructions that you should abide when install the centrifuge to ensure your safety and the optimum performance. Before moving the centrifuge, the rotor must be removed.

Improper power supply may damage centrifuge.

Make sure the power source conforms to the required power supply before connecting.

Location

- 1. Place this centrifuge on a firm, flat and level surface, ensure the four feet of this centrifuge stand on the counter firmly. Avoid installing on a slippery surface or surface prone to vibration.
- 2. Ideal ambient temperature is 20°C±5°C, avoid placing the centrifuge in direct sunlight if temperature exceeds 30°C.
- 3. Keep clear of the centrifuge at least 10cm on both sides and at least 30cm behind it to guarantee the cooling efficiency.
- 4. Keep away from heat or water to avoid sample temperature issues or centrifuge failures.

Connection of the power cord and grounding

To avoid electrical shocks, ensure your hands are dry when touching the power cord. This centrifuge must be grounded properly.

A minimum 10A outlet providing a sufficient ground is required, and this must meet local safety requirements.



4. STRUCTURE



Rear view of the centrifuge

OPERATION PANEL



Operation panel



ITEM	SYMBOL	NAME	FUNCTION
1	SELEC	Select Button	Press the button to choose the program which you want to modify.
2	PULSE	Pulse Button	The speed can be accelerated and held at the speed when pressing Pulse on.
3	DODR	Open/Lock Button	Press the button to open the door. The button is not available when the centrifuge is running.
4	(START STOP	Start/Stop Button	Press the button to start running. The centrifuge will brake to stop running if pressed during centrifugation.
5	\bigcirc	Parameter Button	Clockwise rotate to increase program values. Rotate anti- clockwise to decrease parameter values. Press the button, shift between speed and RCF display.



The main interface

Main interface

In the above diagram; the speed is set to be 4,500rpm, the door lock is released and the running time is 12 minutes. When speed symbol $\frac{1}{2}$ s rotating, this indicates the centrifuge is running. If the rotation is faster, the speed is higher.

Temperature of chamber is displayed and cannot be controlled. Time symbol Sisplays the ratio of working to time setting. The total time setting is divided into 10 sections.



Rotor Preparation

- Do not overload samples which may cause leaking.
- Do not exceed the actual capacity allowed in the user manual.

Keep the tubes balanced

- Although the centrifuge can accept sample balancing by eye, we recommend that you keep this centrifuge in a well-balanced condition to extend its life expectancy.
- Never intentionally run the centrifuge under an unbalanced condition even though the allowable imbalance is not exceeded.

Inspect the rotor

Check the rotor for corrosion or scratches before using.

- If any abnormality such as corrosion or scratches are found, stop using the rotor and contact our service center.
- Only manufacturer's rotors must be used with the unit.

Symmetrically load centrifuge tubes into rotor

- Make sure the rotor lid is securely fixed on the rotor, as well as the rotor and shaft are tightened. Otherwise, the rotor may be moved off while rotating and cause damage to the centrifuge and rotor.
- Firmly tighten the rotor lid to the rotor.



5. OPERATION

- Do not push or lean against the centrifuge while it is running.
- Do not run the centrifuge when fragments or sample solutions are left in the centrifuge chamber. Always keep the centrifugal chamber clean.
- If the centrifuge makes strange noise during operation, stop it immediately and contact our service center. Notify them of the warning code if displayed.

Normal operation

Turn on the power switch, centrifuge will display the running interface last time after passing the self-diagnostic checks



- Speed: 4500rpm. Running time: 12 minutes.
- The door lock is released.

1. Set the operation programs

Press the button to select required program. The parameter can be modified when the program is flashing. Rotate the program button clockwise to increase parameter value. Rotate the program button anti-clockwise to decrease parameter value. Rotate the program button faster, and the parameter value will increase faster. The minimum speed increment is 100 rpm, the minimum time increment is 1 second.

1. Set the speed

- Press the select button ^{SELEC} until the speed rpm is displayed.
- When the speed button is selected, the speed symbol will flash the speed value.
- The minimum speed value you can set 500rpm, the minimum increment is 100 rpm.
- Rotate program button clockwise 🔿 to increase speed value. Rotate the program button anti-clockwise 🔿 to decrease speed value.
- You can speed-up set the speed value by rotating program button Oquickly.



2. Set the time

Press select button *select*, time value flashes in the time setting mode.

Rotate the program button to set running time from 30 seconds to 99 minutes. When the time displays HD, this is a continuous running mode.

2. Start the operation

1. Press button (START STOP) to start running

- The door must be locked before rotor starts spinning.
- The timer will start once the rotor starts spinning, the screen displays the remaining run time.

2. View and modify the operation programs

- Operation programs can be modified after the centrifuge reaches the set speed.
- Pressing the select button select button, returns the display to the program interface and displays setting programs.

Press the select button ^{SELEC} to the desired program. When flashing, rotate parameter button to modify values. Release the button after 5 seconds, and the centrifuge will return to normal operation mode and run according to the new value.

• If the set time value has been modified, the operation time is not affected and will continue.

3. Warning display

• If an error occurs during the operation, the centrifuge will brake to stop automatically, and display the error code on the time/display area. The error code can be checked in the table 11-1, and corrective actions can be applied accordingly.

3. End the operation

1. The centrifuge will brake when it reaches the set time or (STOP) button is pressed.

- When the rotor stops rotating, the centrifuge will start beeping to alert the operation has finished.
- 2. Open the door
 - The door can be released automatically when the operation has stopped.
 - With the door closed, you are able to press the *DOOR* button to open it.
 - After ending the operation, the program will store the setting parameters of this operation, and will recall these parameters when restarting the program.

3. Open the door and take out the rotor and samples.



RCF operation

1. Turn on the power switch

2. Set a RCF (Relative Centrifugal Force) value

Do not exceed the allowable maximum RCF value of the rotor and adapters.

- Press the select button select button and choose speed unit ×g, the speed symbol will flash into RCF value input status.
- If no button is pressed after the speed value has flashed after 5 seconds, the input mode will be shut down.
- Rotate program button Oto input a RCF value, RCF increment is10×g.

3. Set operating conditions

The other operation, please refer above.

Pulse operation

This function is used to remove the residual samples adhered to the interior of the tubes or for quick spins.

Note: The button works only while the rotor stopped and the door is locked.

1. Turn on the power switch and load the rotor to the shaft, tighten the rotor lid and make sure it is in secured position, and then close the door.

2. The centrifuge goes into preparation mode and displays last running values.

3. Press *Pulse* knob and hold, the centrifuge will speed up to the setting speed. While releasing the *Pulse* knob during acceleration, the centrifuge will start to decelerate and stop.



6. MAINTENANCE

Cleaning

• If you do not follow the recommended instructions for cleaning or disinfecting this may damage the centrifuge.

1. Centrifuge

- If the centrifuge is exposed to ultraviolet rays for a long time, the color of the door may be changed or the label may be peel off. After using, cover the centrifuge with a piece of cloth to protect it from direct exposure.
- If the centrifuge needs cleaning, clean it with a cloth or sponge moistened with a neutral detergent solution.
- Sterilize the centrifuge by wiping with a cloth moistened with 70% ethanol solution.

2. Rotor chamber

A CAUTION

- Do not directly pour water, neutral detergent or disinfectant solution into the rotor chamber, otherwise fluids may leak into the drive units and cause corrosion or detesrioration to the bearings.
- If the rotor needs cleaning, clean with cloth or sponge moistened with a neutral detergent solution. Sterilize the centrifuge by wiping with a cloth moistened with 70% ethanol solution.

3. Drive shaft

• We recommend regular maintenance for drive shaft. You can wipe the drive shaft with soft cloth, and then apply a thin coat of silicon grease.

4. Door

• Clean and sterilize the door using the same method as the section (1) above.

5. Rotor

- To prevent corrosion, remove the rotor from rotor chamber. If not in use for a long term, then detach the rotor lid and turn upside down to dry the tube holes and keep clean.
- For sample leaks in the rotor, rinse the rotor with water. Apply a thin coat of silicon grease to the rotor when it is completely dry.
- The rotor should be checked every 3 months to ensure the tube and rotor holes keep are clean and apply a thin coat of silicon grease.



7. TROUBLESHOOTING

Possible problems and solutions

• This centrifuge has a self-diagnostic function. If a problem occurs, an error/warning code will be displayed on the time display screen, and the operator can determine the malfunction with the alarm code below.

SYMPTOM	CAUSES	SOLUTIONS	
NOTHING APPEARS ON THE SCREEN WHEN THE POWER IS TURNED ON.	-Building power circuit breaker trips.	-Remove the trouble and turn on the POWER.	
ABNORMAL VIBRATION	-Rotor do not match with spindle -Samples are imbalance	-Re-install the rotor -Weighting scales, install symmetrically	
E-02 Door fault E-02 Door fault E-06 Set wrong speed	-The door opened in running. -The stop outton is pressed while the door opening.	-Close the door immediately -Close the door and then start to operate.	
SCREED C	-The setting speed exceed the allowable range.	-Modify the speed value.	
E-10~86	-Read the service manual	-Contact with service center	

Table 11-1 Possible problems and solutions

• Alarm codes E-1~E-9 are related to incorrect operation/programming. You can continue running the centrifuge after implementing corrective procedures.

How to open the door

1. In the case of power on

A CAUTION

• The door just can be opened while the power is on and rotor stops rotating.

1. Turn on the power switch, release the door automatically.

2. The door will be released automatically once the operation is finished.

3. It is available to release the door by press DOOP button once the rotor stops.

2. In the case of power outage

The door cannot be opened automatically if there is a power outage. It is available to be opened manually as follows.

1. Ensure if the rotor has stopped rotating.

• Listen carefully to ensure no rotating sound can be heard.

2. Insert a screw driver into a hole to open door.

- Holes are located on the left and right sides of the unit.
- Insert a screw driver into the two holes and push forward to release the door.



8. INSTRUCTIONS FOR THE ROTOR AND TUBES

- Read the instructions thoroughly, to properly load and use rotor.
- Do not exceed the allowable maximum speed of rotor, tube and adapters etc. Ensure the allowable maximum speed of adapters is lower than the rotor's maximum speed.

1. Rotor structure





1.1 Available rotors and adapters

TUBES	TUBES QUANTITY	DIMENSION (Ф×L MM)	ADAPTERS	MAXIMUM SPEED (RPM)	MAXIMUM RCF (×G)
15ML CONICAL BOTTOM	8	17×120		4,500	2,490
1.5 - 5ML VACUTAINERS	12	13×82	400.003.311 & 400.003.312	4,500	2,218
	12	13×106	400.003.311	4,500	2,490
4 - 7ML VACUTAINERS		16×75	400.003.311 & 400.003.312	4,500	2,218
8.5 - 10ML VACUTAINERS	12	16×107	400.003.311	4,500	2,490
2.7 - 3ML COLLECTION TUBE	12	11×66	400.003.311 & 400.003.312	4,500	2,218
7.5 - 8.2ML COLLECTION TUBE	12	15×92	400.003.311	4,500	2,490

Rotors and adapters

2. Notice

• The centrifuge rotor can separate samples with a density lower than 2.0g/ml. If the samples density is over 2.0g/ml, please calculate allowable speed depending on the following formula.

allow speed(*rpm*) = max speed × $\sqrt{\frac{2.0(g/ml)}{sample \text{ density}(g/ml)}}$

9. CALCULATE RCF

An RCF can be determined with the following calculation formula. RCF=1.118 $\times r \times n^2 \times 10^{-5}$

r-rotating radius, unit: cm; n-rotating speed, unit: rpm

AFTER SALES SERVICE

In order to ensure to operate centrifuge safely and efficiently, it is necessary for regular maintenance. If centrifuge has problems, do not attempt to repair it by yourself. Contact your supplier.



Printed technical specificartions are subject to change without notification Labco® is a registered trademark.

See the full product range online.

1800 052 226 sales@labcoscientific.com.au labcoscientific.com.au