



Scan QR Code with your WebCam for downloading the user instruction manual.


AdventurerTM Balances Quick Start Guide





Please download the user manual from www.ohaus.com.

1. ASSEMBLY

1) Unpack the balance

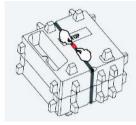

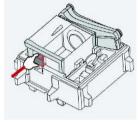

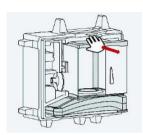

1) Remove the binder


2) Take out the red cube

3) Take out the balance


For 1mg and 0.1mg Models:



2) Install Wind ring and weighing pan

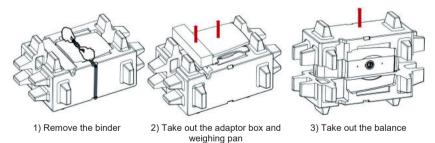

For 0.1g and 0.01g Models:

 





Quick Start Guide

2. DEFINITION OF SIGNAL WARNINGS AND SYMBOLS

Safety notes are marked with signal words and warning symbols. These show safety issues and warnings. Ignoring the safety notes may lead to personal injury, damage to the instrument, malfunctions and false results.

Signal Words

WARNING For a hazardous situation with medium risk, possibly resulting in injuries or death

if not

avoided

CAUTION For a hazardous situation with low risk, resulting in damage to the device or

the property or in loss of data, or injuries if not avoided.

Attention For important information about the product Note For useful information about the product

Warning Symbols



 
General Hazard



Electrical Shock Hazard



Alternating current



3. SAFETY PRECAUTIONS



CAUTION: Read all safety warnings before installing, making connections, or servicing this equipment. Failure to comply with these warnings could result in personal injury and/or property damage. Retain all instructions for future reference.

- Verify that the AC adapter's input voltage range and plug type are compatible with the local AC power to be used.
- Make sure that the power cord does not pose a potential obstacle or tripping hazard.
- The balance is for indoor use only.
- Use the balance only in dry locations.
- Do not drop loads on the pan.
- · Use only approved accessories and peripherals.
- Operate the equipment only under ambient conditions specified in these instructions.
- Disconnect the equipment from the power supply when cleaning.
- Do not operate the equipment in hazardous or unstable environments.
- Service should only be performed by authorized personnel.
- Do not position the balance such that it is difficult to reach the power connection.



4. CONTROLS



Button	Action		
0	Short Press (if powered Off): Turns on the scale Long Press (if powered On): Turns off the scale Note: The balance will automatically power on when power is connected.		
Print	Short Press: Prints the present data to a printer or a computer.		
Zero	Short Press: Perform Zero operation		
Cal	Cal Short Press: Perform Calibration operation		
Tare	Short Press: Perform Tare operation		

Main Application Screen



Capacity and readability

Result Field: Information varies by application

Touch g to change unit

Application Buttons:

Functions vary by application

Adventurer™ Balances OHAUS



Main Menu

Calibration

Communication

Quick Start Guide

Balance Setup

GLP and GMP Data

Back

5. MENU & SCREEN NAVIGATION

Touch Menu to open the menu list.



Calibration:

Touch to view calibration options.



Balance Setup:

Touch to view and change balance settings.



Weighing Units:

Touch to view and change weighing units.



Data Maintenance:

Touch to view data maintenance settings.



GLP and GMP Data:

Insert user data for traceability.



Communication:

Touch to view COM Device Settings and Print Settings.



Factory Reset:

Touch to do a Factory reset of menu settings.

Data Maintenance

Lockout

Exit



Lockout:

Touch to view lockout options.

Factory Reset

6. APPLICATIONS

The balance can be configured to operate in various Application modes. Touch the top left Application field (weighing in the example below):







Adventurer™ Balances

The Adventurer Balance has 9 application modes, as follows:



Weighing



Parts Counting









Percent Weighing

Dvnamic (Animal) Weighing

Determination

Weighing



Hold





Formulation

7. CONNECTING THE INTERFACE

Use the built-in RS-232 Port to connect either to a computer or a printer with a standard (straight-through) serial cable. Or connect using the scale's USB port.

Interface connections on the rear of the balance:



USB connection on the front of the balance:



USB1: Used to connect to PC only RS232: Used to connect to PC or Printer

USB2: Used to connect a USB flash driver only

8. WEIGH BELOW HOOK

To use this feature, remove power from the balance, then remove the protective cover for the weigh below opening.





Ohaus Corporation 7 Campus Drive Suite 310 Parsippany, NJ 07054 USA Tel: +1 973 377 9000 Fax: +1 973 944 7177

With offices worldwide. www.ohaus.com



P/N 30111760B © 2018 Ohaus Corporation, all rights reserved.