




## JUSTRITE CABINETS EXCEED AUSTRALIAN STANDARD COMPLIANCE AS1940

Justrite Cabinets: are the only cabinet that have been fire tested and rated by FM Global (Factory Mutual performance standard that is recognised by Insurance Companies) the cabinets are rated at 10 minutes and the internal temperature shall not exceed 163 celcius.

"Something no other cabinet in Australia can claim."



Fusible links hold doors wide open and melts at 74°C for automatic closure (on self-close models).

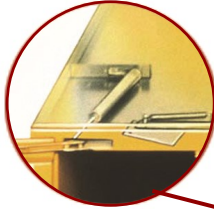

Patented concealed self-close mechanism provides obstruction free access to top shelf space. Self-indexing doors guarantee they will close in sequence and assure a tight closure from top to bottom (on self-close models).



Rounded safety corners on doors reduce accidental nicks or cuts and potential hand injury.



Haz-Alert™ Reflective labeling provides high visibility in the dark under fire conditions or power outage when illuminated by a flashlight beam. Patent Pending.

Minimal air-gaps provide better protection.

Double wall thermal barrier. 1.2mm sheet steel thickness with 40mm wall spacing.

Easy close, self latching doors.


Fully-welded (not riveted) construction holds squareness for longer life, offering greater protection in a fire since air gaps are reduced.

Continuous piano hinge provides smooth closure.

Built-in grounding connector (on outside side panel) for easy grounding.

Dual vents with builtin flame arresters strategically placed at bottom and opposite top are welded, not screwed in place.

Durable and chemical resistant, hybrid leadfree powder coat paint finish, inside-and-out, retains high gloss look and minimizes the effects of corrosion and humidity.

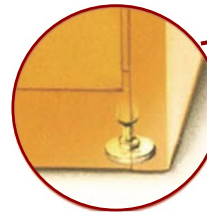

Adjustable leveling feet for stability on uneven surfaces.



Welded shelf hangers interlock with shelf to offer maximum "no slip" stability... and no flimsy brackets to lose.



Stainless steel, three-point bullet self-latching system provides easy, fail-safe, positive door closure with increased heat resistance.



Exclusive U-Loc™ Padlockable Handle. Optional padlock allows for extra security and keycoding multiples for convenient access. Flush paddle handle with slip resistant grip offers easy fingertip operation and reduces dangerous "catches" from passing traffic. Double key set included for keyed lock. Patent Pending

Exclusive SpillSlope™ safety shelves directs spills to back and bottom of leak proof sump. Heavy-gauge galvanized steel shelves are bi-directional and easily adjust on 76mm centers for versatile storage. Each cabinet is provide standard with 150 mm deep sump to contain spills or leaks within the cabinet.



### CABINET DIMENSIONS

Model Number	Capacity	Shelves	Doors H x W x D	External Measurement H x W x D	Internal Measurement
AU25602	350	3	2	1760 x 870 x 870	1520 x 785 x 785
AU25452	250	3	2	1760 x 1100 x 465	1520 x 1020 x 375
AU25302	160	2	2	1230 x 1100 x 465	990 x 1020 x 375
AU25304	110	2	1	1230 x 670 x 465	990 x 590 x 375
AU25308	170	3	1	1760 x 670 x 465	1520 x 590 x 375
AU25744	50	1	2	745 x 770 x 565	505 x 710 x 485
AU25748	100	2	2	800 x 920 x 565	560 x 830 x 480
AU25712	60	2	1	1005 x 595 x 465	765 x 505 x 375
AU25714	30	2	1	800 x 595 x 465	560 x 505 x 375
AU25716	15	1	1	565 x 432 x 432	470 x 349 x 349
AU25701	250		2	1760 x 870 x 870	1520 x 785 x 785
AU25662	250		2	1385 x 765 x 1225	1145 x 685 x 1145
AU29801CS	45	2	2	425 x 1092 x 457	310 x 1003 x 370
AU29804SC	64	2	2	610 x 1092 x 457	485 x 1003 x 370

All types of cabinets have the same external measurements. The internal measurements shown are for Flammable, Corrosive, Poison and Pesticide cabinets. For details on Organic, Peroxides and Oxidising Agents please contact customer service.