



AU25701



AU25662



AU25302



AU25452



AU25602



## \*\* Flammable Storage Cabinets \*\*

**Flammable Safety Storage Cabinets** provide a safe, close-by, secure and time-saving method for storing all types of dangerous materials and help you to maintain good housekeeping practices.

**All Justrite cabinets** are **fire tested to comply** with the **FM** rating, something no other cabinet sold in Australia can claim, they also not only comply, but exceed Australian Standard AS 1940.

They help companies by providing product near to the workplace thus avoiding the time consuming and often risky practice of collecting from an outside storage facility.

Model Number	Description	Approval	Weight Kg
<b>Drum Cabinets...Yellow Powder Paint Finish</b>			
AU25662	207 Litre Horizontal Drum - 2 Door		168.3
AU25701	207 Litre Vertical Drum 2 Door With Rollers		192.8
AU25701W	207 Litre Vertical Drum 2 Door for Waste Products		170.0
<b>Storage Cabinets...Yellow Powder Paint Finish</b>			
AU25302	160 Litre, 2 Shelves, 2 Door, 6 x 20 Litre Drums	FM	104.8
AU25452	250 Litre, 3 Shelves, 2 Door, 9 x 20 Litre Drums	FM	142.0
AU25602	350 Litre, 3 Shelves, 2 Door, 15 x 20 Litre Drums	FM	177.8
<b>Slim Line Styled Storage Cabinet...Yellow Powder Paint Finish</b>			
AU25304	110 Litre, 3 Shelves, 1 Door	FM	95.0
AU25308	170 Litre, 3 Shelves, 1 Door	FM	135.0
<b>Tray Top or Under Bench Cabinet...Yellow Powder Paint Finish</b>			
AU25748	100 Litre, 2 Shelves, 2 Doors	FM	86.1
<b>Compac Storage Cabinet...Yellow Powder Paint Finish</b>			
AU25712	60 Litre, 2 Shelves, 1 Door	FM	59.0
AU25714	30 Litre, 2 Shelves, 1 Door	FM	45.0
AU25716	20 Litre, 1 Shelves, 1 Door	FM	40.0



AU25714



AU25748



AU25304 / AU25308



Fusible links hold doors wide open and melts at 74°C for automatic closure (on self-close models).



Patented concealed self-close mechanism provides obstruction free access to top shelf space. Self-indexing doors guarantee they will close in sequence and assure a tight closure from top to bottom (on self-close models).



Rounded safety corners on doors reduce accidental nicks or cuts and potential hand injury.



Haz-Alert™ Reflective labeling provides high visibility in the dark under fire conditions or power outage when illuminated by a flashlight beam. Patent Pending.

Minimal air-gaps provide better protection.

Double wall thermal barrier. 1.2mm sheet steel thickness with 40mm wall spacing.

Easy close, selflatching doors.

Fully-welded (not riveted) construction holds squareness for longer life, offering greater protection in a fire since air gaps are reduced.

Continuous piano hinge provides smooth closure.

Built-in grounding connector (on outside side panel) for easy grounding.

Dual vents with builtin flame arresters strategically placed at bottom and opposite top are welded, not screwed in place.


Durable and chemical resistant, hybrid leadfree powder coat paint finish, inside-and-out, retains high gloss look and minimizes the effects of corrosion and humidity.



Adjustable leveling feet for stability on uneven surfaces.



Welded shelf hangers interlock with shelf to offer maximum "no slip" stability... and no flimsy brackets to lose.

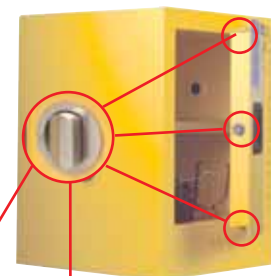

Stainless steel, three-point bullet self-latching system provides easy, fail-safe, positive door closure with increased heat resistance.



Exclusive U•Loc™ Padlockable Handle. Optional padlock allows for extra security and keycoding multiples for convenient access. Flush paddle handle with slip resistant grip offers easy fingertip operation and reduces dangerous "catches" from passing traffic. Double key set included for keyed lock. Patent Pending



Exclusive SpillSlope™ safety shelves directs spills to back and bottom of leak proof sump. Heavy-gauge galvanized steel shelves are bi-directional and easily adjust on 76mm centers for versatile storage. Each cabinet is provide standard with 150 mm deep sump to contain spills or leaks within the cabinet.



## CABINET DIMENSIONS

Model Number	Capacity	Shelves	Doors H x W x D	External Measurement H x W x D	Internal Measurement
AU25602	350	3	2	1760 x 870 x 870	1520 x 785 x 785
AU25452	250	3	2	1760 x 1100 x 465	1520 x 1020 x 375
AU25302	160	2	2	1230 x 1100 x 465	990 x 1020 x 375
AU25304	85	3	1	1760 x 595 x 465	1520 x 515 x 385
AU25308	210	3	1	1760 x 595 x 870	1520 x 515 x 785
AU25748	100	2	2	800 x 920 x 565	560 x 830 x 480
AU25712	60	2	1	1005 x 595 x 465	765 x 505 x 375
AU25714	30	2	1	800 x 595 x 465	560 x 505 x 375
AU25716	15	1	1	560 x 595 x 460	425 x 505 x 375
AU25701	250		2	1760 x 870 x 870	1520 x 785 x 785
AU25662	250		2	1385 x 765 x 1225	1145 x 685 x 1145
24040	8		1	500 x 365 x 415	380 x 285 x 330
24120	15		2	470 x 610 x 410	350 x 560 x 360
24140	90	1	2	908 x 915 x 560	758 x 865 x 510
24150	120	2	2	1525 x 1070 x 455	1375 x 1020 x 405
24160	30	2	2	890 x 920 x 600	720 x 805 x 475

All types of cabinets have the same external measurements. The internal measurements shown are for "Flammable, Corrosive, Poison or Pesticide cabinets". For details on Organic Peroxides and Oxidising Agents please contact your nearest office for customer service.